

iLink400 Update Guide

iLink400 Full System Single Make Scan tool is the most cost-effective professional multi-system scan tool that delivers OE-level diagnosis for all electronic systems of different car brands.

It does not only include basic functions such as read/erase codes and live data, but also it's capable of advanced functions such as actuation, adaptation and programming. In addition, it lets you to access the most commonly required service features such as Oil service Light Reset, Throttle Body Alignment, Electronic Parking Brake Service, Battery configuration, Steering Angel Sensor Calibration, CBS correct and much more.


All iLink400 scan tool will be shipped without any Software installed. You can install any software from the following list at your choice by the update client iScanzilla.

Sub-models for Selection	Coverage	Sub-models for Selection	Coverage
i400 Full System Scan tool - AU Ford	AU Ford	i400 Full System Scan tool -Mazda	Mazda
i400 Full System Scan tool - Ford	Ford, EU Ford	i400 Full System Scan tool - VW & Audi & SEAT & Skoda	VW, Audi, SEAT, Skoda
i400 Full System Scan tool - BMW & MINI	BMW, Mini, Rolls Royce	i400 Full System Scan tool -Jaguar & Land Rover	Jaguar, Land Rover
i400 Full System Scan tool - Chrysler	Chrysler	i400 Full System Scan tool -Volvo	Volvo
i400 Full System Scan tool - Fiat & Alfa Romeo	Fiat, Abarth, Alfa Romeo, Lancia	i400 Full System Scan tool -Aston Martin	Aston Martin
i400 Full System Scan tool - GM	GM	i400 Full System Scan tool -Ferrari	Ferrari
i400 Full System Scan tool - Vauxhall & Opel	Opel, Vauxhall	i400 Full System Scan tool -Peugeot	Peugeot
i400 Full System Scan tool -Honda	Honda, Acura	i400 Full System Scan tool -Citroen	Citroen
i400 Full System Scan tool -Hyundai & Kia	Hyundai, Kia	i400 Full System Scan tool -Mercedes Benz	Mercedes Benz
i400 Full System Scan tool -Holden	Holden	i400 Full System Scan tool -SsangYong	SsangYong
i400 Full System Scan tool -Porsche	Porsche	i400 Full System Scan tool -Subaru	Subaru
i400 Full System Scan tool -Toyota & Lexus	Toyota, Lexus, Scion	i400 Full System Scan tool -Renault	Renault,Dacia
i400 Full System Scan tool - Maserati	Maserati		

1 Software Update

1.1 Step One- Install the Update Client

1. Visit www.videntech.com to download the update client from <http://www.videntech.com/support/>

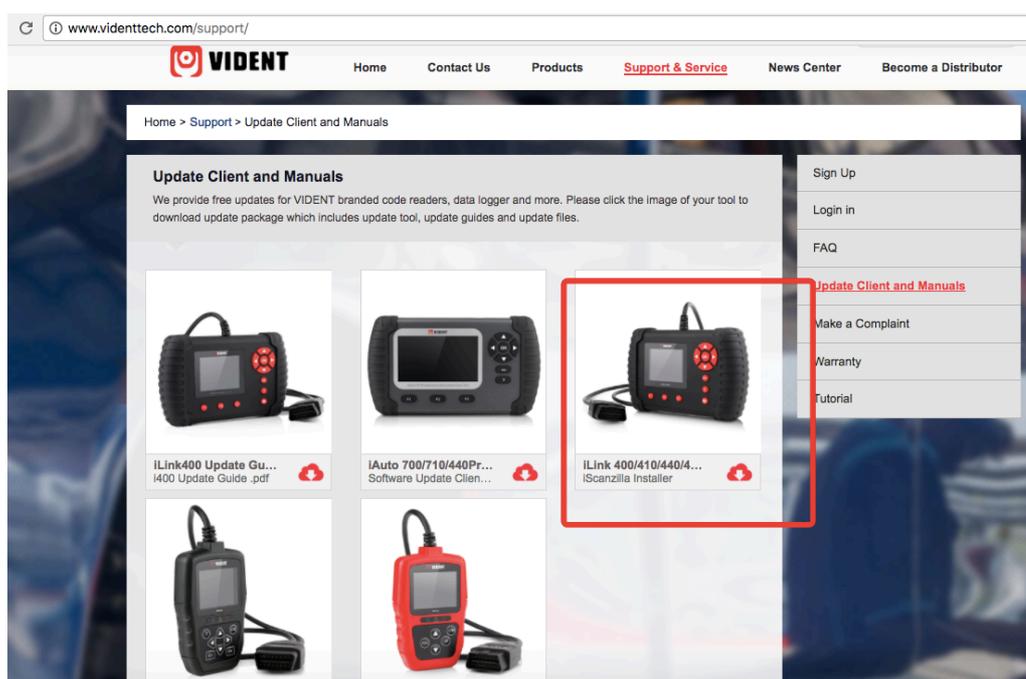


2. The file downloaded will be a compressed zip file. Open that file and run the installer inside it.

Alternatively, you can install the update client from the CD that comes in the product package.

1.2 Step Two - Create Your Vident Account.

Firstly you need to create an account with Vident.


1. Once installed, boots up the iScanzilla software, click the Register button.

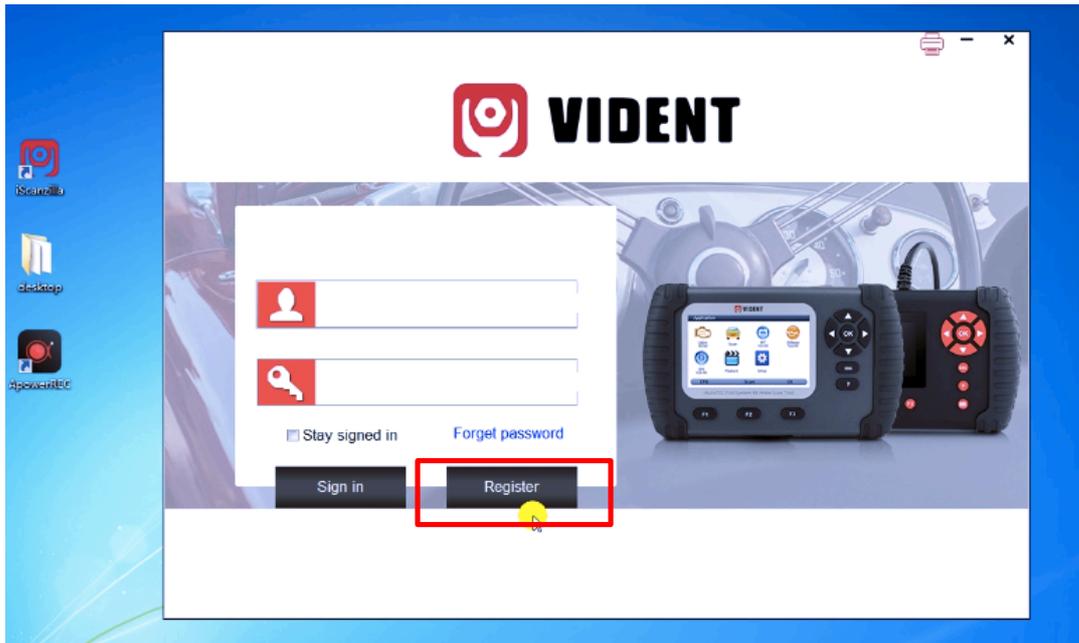

2. Fill out the registration form and submit.


A screenshot of the 'Create Account' registration form on the Vident website. The form is titled 'Create Account' and includes a sub-header: 'Create a new Vident online account here. * Indicates required field'. The form contains several input fields: '* User ID :', '* Password :', '* Confirm Password :', '* First Name :', '* Last Name :', 'Address :', 'State/Province :', 'City :', '* Country :', '* Phone :', '* Email :', and '* Captcha :'. The captcha field shows a distorted image of the characters 'p2Jz' with a red box around it and a link that says 'Click image to refresh'. At the bottom of the form is a large red button labeled 'SUBMIT'.

Alternatively, you can click the Sign Up button on the right upper side of our website to create an user account.

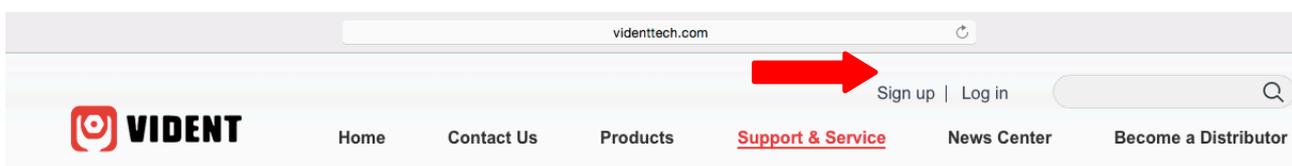


1.4 Step Four – Download and Install Diagnostic Software

1. Now close the iScanzilla software, remove the TF card from your tool (making sure the tool is turned off first!) and connect it to the PC via a TF card reader.
2. Once Windows has detected the TF card, run the iScanzilla software and login again. After a few seconds, a list of the available software updates will appear.

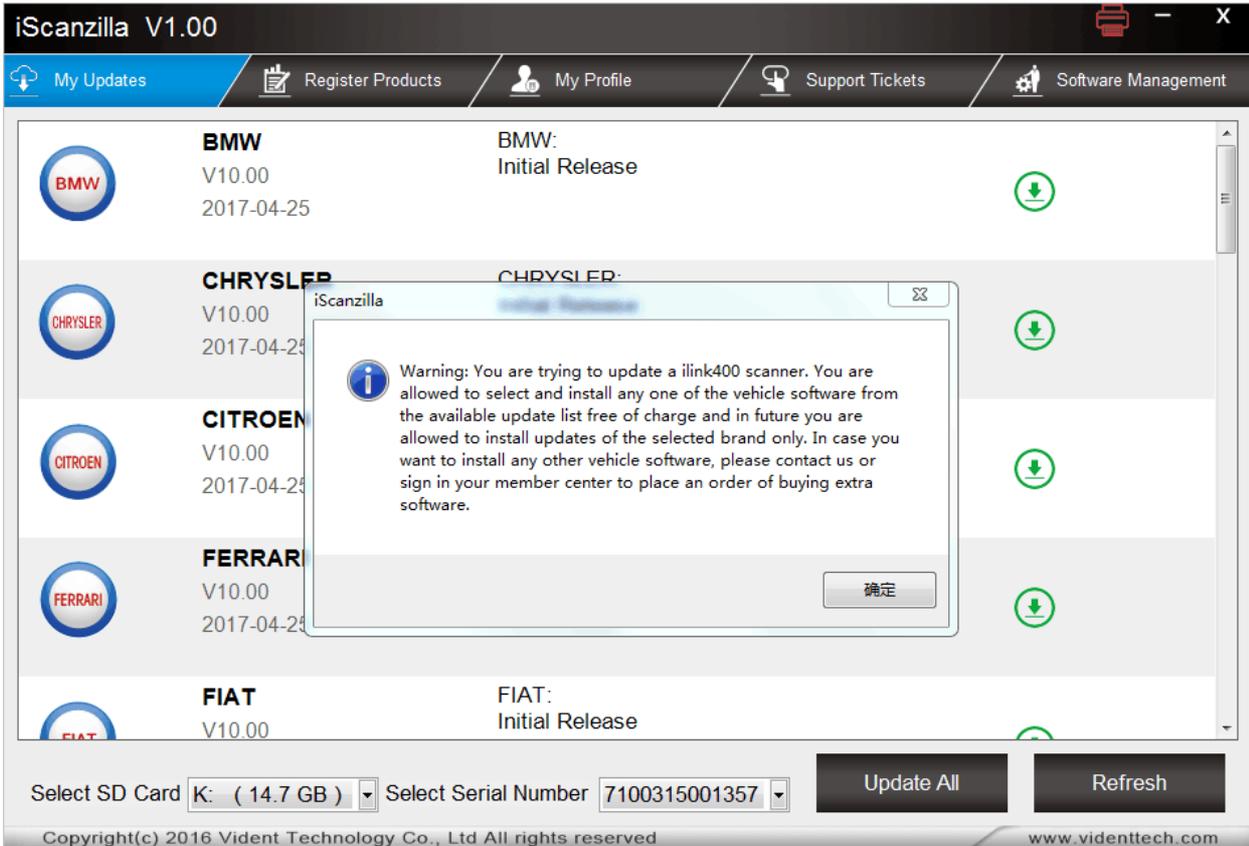

Please select only one software you want to update, as you can ONLY have access to the update of this manufacturer in the future once it's been selected initially. In case you want to install any other vehicle software, please contact us or sign in your member center to purchase. Please refer to next chapter to buy extra software.

3. Click the Update button to download and install the software.

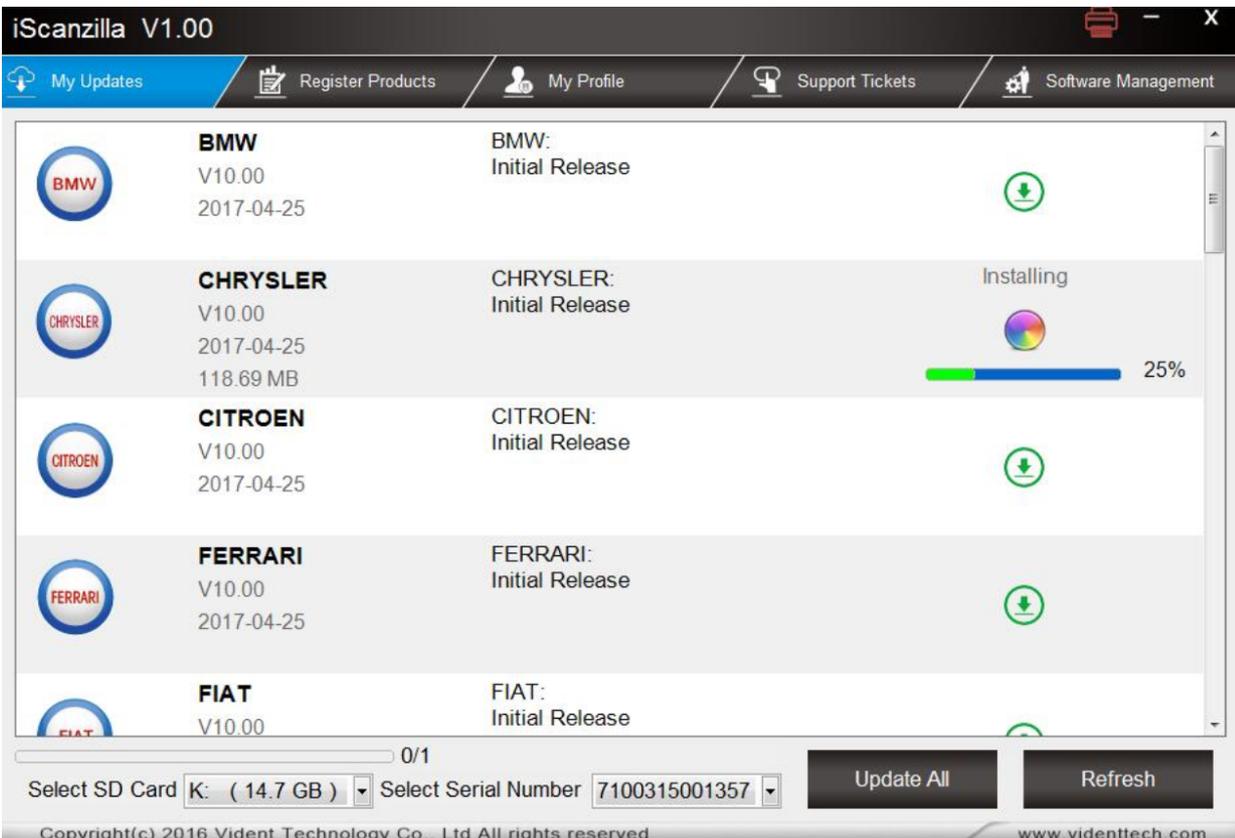

4. Once the software installed, you can go to Software Management to review the installed software.


2 Buy Extra Software

iLink400 is authorized with one free software when delivery and can cover up to six vehicle makes. More software can be added anytime at extra cost. You can contact the reseller or following the steps below to buy extra software.

Buy Extra Software

Step 1/6

1. Log in at our website www.videntech.com and go to your **Member Center**, click **Registered Products**.

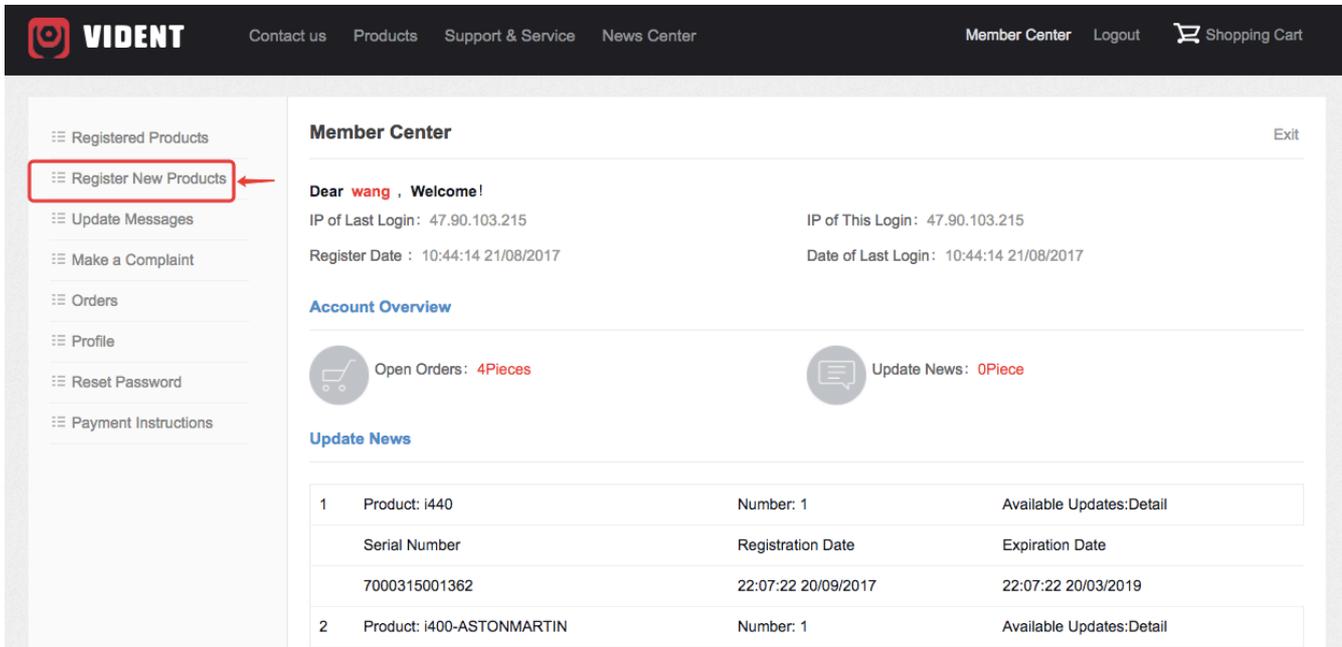


Product	Number	Available Updates
1 Product: i440	Number: 1	Available Updates:Detail
Serial Number	Registration Date	Expiration Date
7000315001362	22:07:22 20/09/2017	22:07:22 20/03/2019
2 Product: i400-ASTONMARTIN	Number: 1	Available Updates:Detail

Buy Extra Software

Step 2/6

2. Find the iLink400 serial number you wish to add extra software and click the **Software Details**

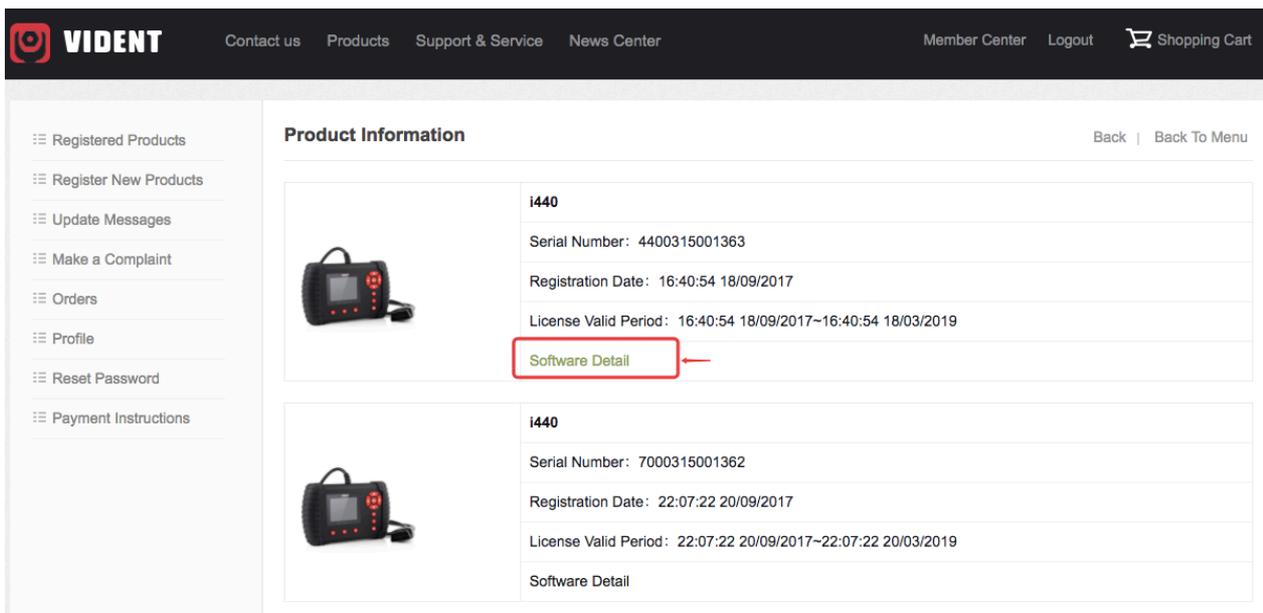

Product	Serial Number	Registration Date	License Valid Period
i440	4400315001363	16:40:54 18/09/2017	16:40:54 18/09/2017~16:40:54 18/03/2019
i440	7000315001362	22:07:22 20/09/2017	22:07:22 20/09/2017~22:07:22 20/03/2019

Buy Extra Software

Step 3/6

- You will see all software already installed on this tool as well as all software available to add. Select the software you need and click **Add To Cart** button.

The screenshot shows the VIDENT website's 'Software Details' page for product ID 7000315009999. The page features a navigation menu at the top with links for Contact us, Products, Support & Service, News Center, Member Center, Logout, and Shopping Cart. A sidebar on the left lists various user actions like 'Registered Products', 'Register New Products', 'Update Messages', 'Make a Complaint', 'Orders', 'Profile', 'Reset Password', and 'Payment Instructions'. The main content area displays a table of software products with columns for Software, Version, Release Date, Language, Status, and Action. The 'Add To Cart' buttons for several products are highlighted with red boxes, and red arrows point to them from the right.

Software	Version	Release Date	Language	Status	Action
ASTONMARTIN	V10.00	25/04/2017	EN	Latest	Upgrade Log
BMW	V10.00	25/04/2017	EN	Latest	Upgrade Log
CHRYSLER	V10.00	25/04/2017	EN	Latest	Upgrade Log
CITROEN	V10.00	25/04/2017	EN	Latest	Upgrade Log
FERRARI	V10.00	25/04/2017	EN	Latest	Upgrade Log
FIAT	V10.00	25/04/2017	EN	Latest	Upgrade Log
FORD	V10.00	25/04/2017	EN	Latest	Upgrade Log
FORDAU	V10.00	25/04/2017	EN	Latest	Upgrade Log
GM	V10.00	25/04/2017	EN	Latest	Upgrade Log
HOLDEN	V10.00	25/04/2017	EN	Latest	Upgrade Log
HONDA	V10.00	25/04/2017	EN	Latest	Upgrade Log

Buy Extra Software

Step 4/6

- You can manage your shopping cart by clicking Delete to delete the software that you don't need or click **Continue Shopping** to go back to Member Center page to add more into the cart.

The screenshot shows the VIDENT 'My Shopping Cart' page. It features a progress bar at the top with three steps: '1 Add to cart', '2 Review Order', and '3 Confirm and Pay for Order'. Below the progress bar is a table listing the items in the cart. Each item has a 'Delete' button. At the bottom of the table, the total number of software pieces and the total amount are displayed. Two buttons, 'Continue Shopping' and 'Proceed to Checkout', are located at the bottom right of the cart area.

Product	Quantity	Price	Subtotal	Action
i400-ASTONMARTIN-7000315006666-BMW	1	\$60.00	\$ 60.00	Delete
i400-ASTONMARTIN-7000315006666-FERRARI	1	\$60.00	\$ 60.00	Delete
i400-ASTONMARTIN-7000315006666-GM	1	\$60.00	\$ 60.00	Delete

Total Number of Software: 3Pieces Total Amount: **\$180.00**

Buy Extra Software

Step 5/6

- Continue to process the payment and check out through Paypal.


VIDENT



Buy Extra Software

Step 6/6

6. Log in the update client iScanzilla. When the payment has been made successfully, the software you purchased would be listed in the available updates list for you to download.

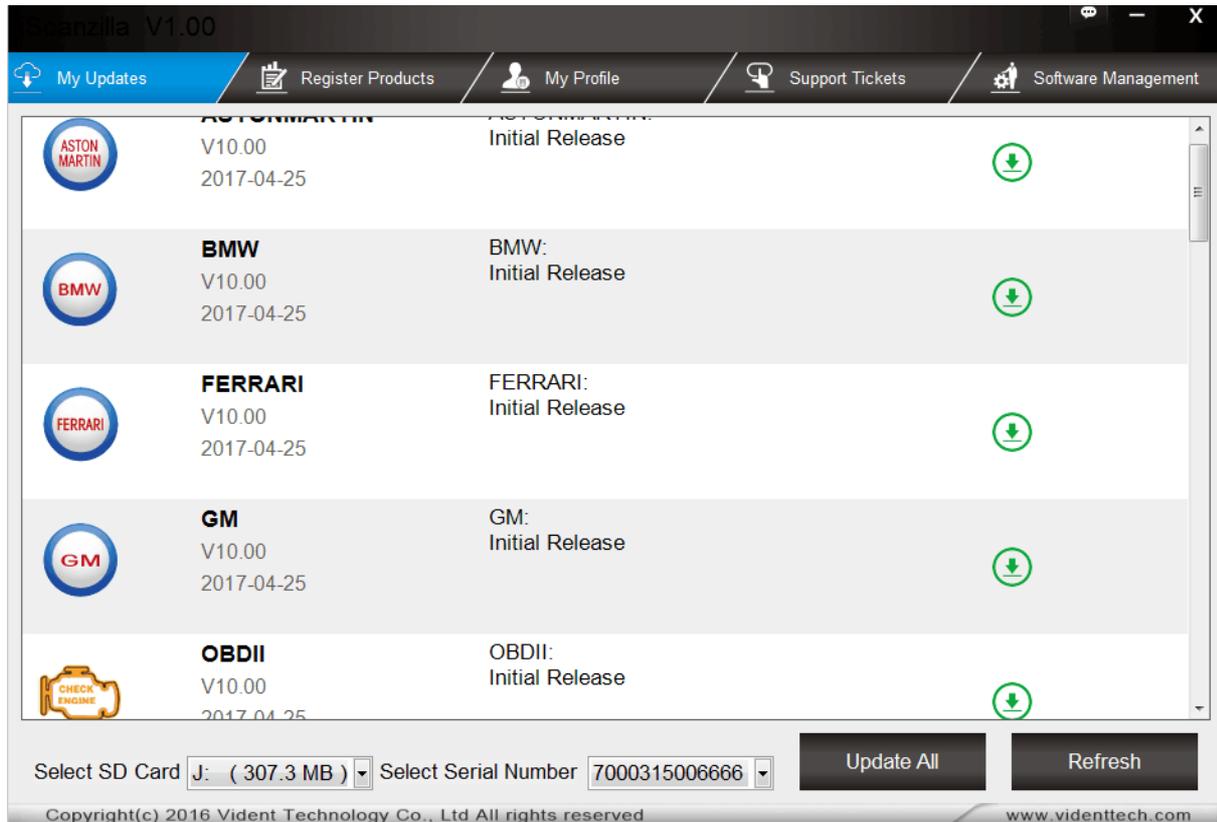

3 Software Renewal

If your free updates ran out, your tool will continue to function - it will not 'time out' - but you will no longer be able to access the update servers. Should you wish to continue updating your tool, you will need to purchase an update package. Please go to our website and log in to process the purchasing.

